
### **OPERATION MANUAL**

Dated: 12/27/2011

Document Name: IonStormPro S33-S50 OM

Page 1 of 8



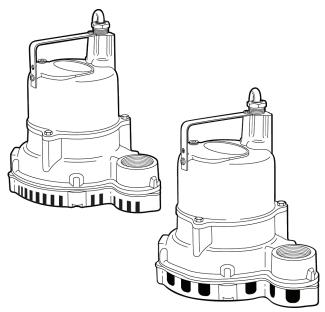

## SAFETY WARNINGS

Thank you for purchasing your Ion|StormPro® Pump. To help ensure years of trouble-free operation, please read the following manual carefully.

pump.

**CAUTION:** Read these safety warnings first before installing, servicing, or operating any

#### **Before Installation**

This manual contains important information for the safe use of this product. Read this manual completely and follow the instructions carefully. Reasonable care and safe methods relating to the installation and operation of this product should be practiced. Check local codes and requirements before installation.

WARNING: Risk of Electrical Shock or Electrocution. May result in serious injury or death or fire hazard. Installer must disconnect all electrical sources prior to installation, handling or servicing. Only qualified personnel may install this system. NFPA 70/National Electric Code (NEC) or local codes must be followed. System must be properly grounded according to NEC. Do not lift pump by power cord.

WARNING: Biohazard Risk. Once wastewater source has been connected to system, biohazard risk exists. Installer(s) and/or service personnel must use proper Personal Protective Equipment and follow handling procedures per OSHA 29 CFR 1910.1030 when handling equipment after wastewater source has been connected to system.

**WARNING:** Risk of Asphyxiation. Installer(s) and/or service personnel must use proper Personal Protective Equipment and follow OSHA 29 CFR 1910.146 or OSHA 29 CFR 1926. Pump may be installed in a location classified by as a confined space.

WARNING: Risk of Fire or Explosion. Do not smoke or use open flames in or around this system. This system is not intended for use in hazardous locations per NFPA 70 National Electric Code. Do not pump flammable liquids. Consult factory for optional equipment rated for hazardous location use.

WARNING: Cutting Risk. Risk of serious cutting or amputation exists. Disconnect all power sources prior to servicing pump. Pump may start without warning.

CAUTION: Do not modify the cord and plug. When using the cord and plug, plug into a grounded outlet only. When wiring to a system control, connect the pump ground lead to the system ground.

CAUTION: Do not run the pump dry. Dry running can overheat the pump (causing burns to anyone handling it) and will void the warranty.

**CAUTION:** The pump normally runs hot. To avoid burns, allow it to cool for 30 minutes after shutdown before handling it.

CAUTION: Submersible sump pumps are not approved for use in swimming pools, recreational water installations, decorative fountains or any installation where human contact with the pumped fluid is common. Pump designed to pump liquid forms of waste mixed with water.

Do not throw away or lose this manual. Keep it in a safe place so that you may refer to it often for the continued safe operation of the product.

# Ion|StormPro® S33 and S50

Submersible Sump and Effluent Pumps

### **OPERATION MANUAL**

(above 120° F).

Dated: 12/27/2011

Document Name: IonStormPro S33-S50 OM

Page 2 of 8

#### PUMP INSTALLATION

These important instructions must be followed for satisfactory performance of your pump. Before installation, check your local electrical and plumbing codes.

- 1. Provide proper sump Minimum Sump Diameter is 18". Make sure sump is free of string, cloth, nails, gravel, etc. before installing pump.
- 2. Do not set pump directly on the bottom of sump if it is not solid. Raise the pump by placing bricks or concrete blocks underneath it.
- 3. Use steel or plastic pipe for all connecting lines between pump and sewer outlet. Note: Some city regulations do not allow installing a pump with plastic pipe. Check local regulations.
- A check valve should be installed in discharge pipe, at least twelve inches above the discharge outlet of the pump.
- 5. Connect to power source using 3-prong grounded 115 volt AC receptacle. Do not remove ground pin from electrical plug. Do not use an extension cord.
- 6. Use pump submerged for sump, de-watering applications (temperature to 120°F).
- 7. In applications where the pump may sit idle for months at a time, it is recommended that the pump(s) be cycled every few months to ensure the pumping system is working properly when needed.
- 8. An audible alarm for high water conditions should be installed for additional protection against high water conditions.

#### Your pump warranty is void...

If...power cord has been cut.

If...pump has been used to pump mud, cement, tar, abrasives or chemicals.

If...pump has been used for pumping hot water

#### PUMP TROUBLESHOOTING

Servicing should be performed only by an authorized service center.



**WARNING:** Before handling these pumps and controls, always disconnect the power

CAUTION: Risk of Fire or Explosion. Do not smoke or use open flames in or around this system. This system is not intended for use in hazardous locations per NFPA 70 National Electric Code. Do not pump flammable liquids. Consult factory for optional equipment rated for hazardous location use.

#### Pump does not run or just hums.

- 1. Line circuit breaker may be off, tripped or loose.
- 2. Pump cord plug may not be making contact in receptacle.
- If all symptoms check okay, motor winding may be open; take to authorized service center for check.

#### Pump runs but does not deliver water.

- 1. Check valve may be installed backward. Arrow on valve points in direction of flow.
- 2. Discharge gate valve, if used, may be closed.
- 3. Pump may be air locked. Start and stop several times by plugging and unplugging cord. Check vent hole in pump case for plugging.
- 4. Pump head may be too high. Pump cannot deliver water over 30' (1/2 HP), 26' (1/3 HP) vertical. Horizontal distance does affect pumping to friction loss.
- 5. Inlet in pump base may be clogged. Remove pump and clean out openings.
- 6. Impeller or volute openings may be plugged or partially plugged. Remove pump and clean out.

# Pump runs but delivers only small amount of water.

1. Pump may be air locked. Start and stop several

## Ion|StormPro® S33 and S50

Submersible Sump and Effluent Pumps

#### **OPERATION MANUAL**

Dated: 12/27/2011

Document Name: IonStormPro S33-S50 OM

Page 3 of 8

times by plugging and unplugging cord. Check vent hole in pump case for plugging.

- 2. Pump head may be too high. Pump cannot deliver water over 30' (½ HP), 26' (1/3 HP) vertical. Horizontal distance does not affect pumping, except loss due to friction.
- 3. Inlet in pump base may be clogged. Remove pump and clean out openings.
- 4. Impeller or volute openings may be plugged or partially plugged. Remove pump and clean out.
- Pump impeller may be partially clogged causing motor to run slow, resulting in motor overload. Clear impeller.

# Fuse blows or circuit breaker trips when pump starts.

- 1. Inlet in pump base may be clogged. Remove pump and clean out openings.
- 2. Impeller or volute openings may be plugged or partially plugged. Remove the pump and clean.
- 3. Pump impeller may be partially clogged causing motor to run slow, resulting in motor overload. Clear impeller.
- 4. Fuse size or circuit breaker is too small.
- 5. Defective motor stator; return to authorized service center for verification.

# Motor runs for short time then stops. Then after short period starts again. Indicates tripping overload caused by symptom shown.

- 1. Inlet in pump base may be clogged. Remove pump and clean out openings.
- 2. Impeller or volute openings may be plugged or partially plugged. Remove pump and clean out.
- Pump impeller may be partially clogged causing motor to run slow, resulting in motor overload. Clear impeller.
- 4. Defective motor stator; return to authorized service center for verification.



### **OPERATION MANUAL**

Dated: 12/27/2011

Document Name: IonStormPro\_S33-S50\_OM
Page 4 of 8

### Installation Drawing




### **OPERATION MANUAL**

Dated: 12/27/2011


Document Name: IonStormPro\_S33-S50\_OM

Page 5 of 8


### **S33 Performance**

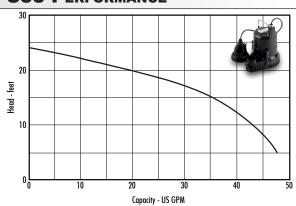


### **\$50** Performance

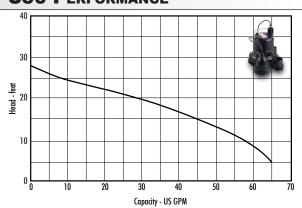

# **S33 DIMENSIONS**

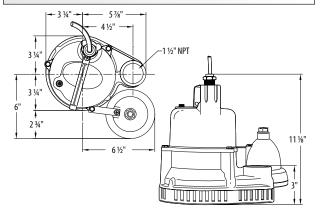

# **S50 DIMENSIONS**

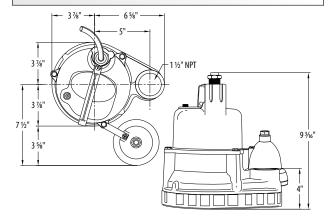

### **OPERATION MANUAL**

Dated: 12/27/2011

Document Name: IonStormPro\_S33-S50\_OM

Page 6 of 8

|       | 1   |  |
|-------|-----|--|
| Notes |     |  |
|       | l   |  |
|       | . , |  |
|       |     |  |
|       |     |  |
|       | •   |  |
|       | •   |  |
|       | •   |  |
|       | •   |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       | •   |  |
|       | •   |  |
|       | •   |  |
|       | •   |  |
|       | -   |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |
|       |     |  |

# **OPERATION MANUAL**

Dated: 12/27/2011

Document Name: IonStormPro\_S33-S50\_OM

Page 7 of 8

| Notes |   |  |
|-------|---|--|
|       | 1 |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       | - |  |
|       |   |  |
|       |   |  |
|       |   |  |
|       | - |  |
|       | - |  |
|       |   |  |
|       | - |  |

#### OPERATION MANUAL

Dated: 12/27/2011

Document Name: IonStormPro S33-S50 OM

Page 8 of 8

